

EDGE LOC - CONCRETE PAVER EDGING DIRECTIONS FOR USE

TOOLS



WHEN TO USE


- Designed to provide lateral support and stability to paver installations
- Ideal for concrete paving blocks, patios, walkways, & driveways
- Pedestrian and vehicular projects

TIPS

- Organize mixing and application to be as close to the work area as possible.
- Recommended for use after laying pavers
- It may be helpful to use a plate compactor to even out the bedding sand. Once the bedding sand is ready, place the pavers and apply Edge Loc

COVERAGE

- Each 25 lb pail will yield approximately 8 linear feet. Yield will vary depending on project conditions and base type.

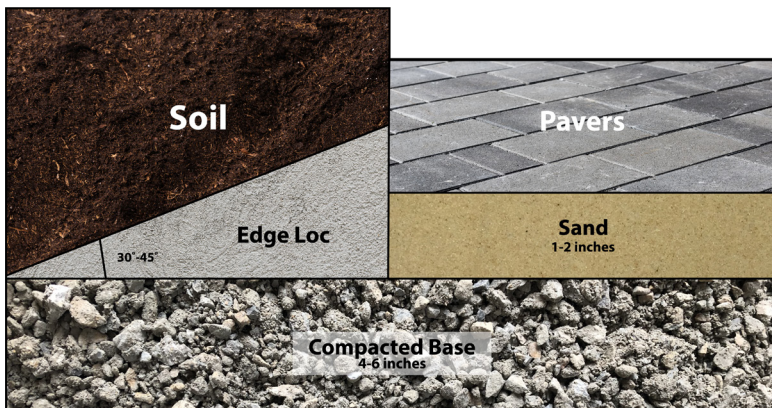

Complete your project by covering with soil, mulch or rock

ABOUT

- Easy to use, just add water and mix
- Polymer-modified, air entrained and fiber reinforced for durability, flexibility and toughness
- Excellent workability, easy to trowel
- Can be used with curved or straight edged installations
- Ideal for permeable paver installations
- Paintable or sealable if used as a decorative edging
- Can be installed below the ground surface to provide a cleaner look than plastic edge restraints



INSTALLATION

- Read all directions before starting work.
- Mix Edge Loc by adding 2.5 pints of water. You can add water to the Edge Loc pail or pour the Edge Loc into a mixing tub. The best method is to add powder to water in a separate mixing tub to help avoid clumps.
- Use 2.5 pints of water per 25 lb pail.
- Blend the water and powder together until the mix is uniform and lump free.
- Use a shovel or scoop to place the mixed Edge Loc along the edge of the paver installation. The Edge Loc should be placed up to the edge of the pavers.
- The Edge Loc should then be smoothed out with a margin trowel to create a triangular cross section. It should come up at least halfway up the side of the pavers and then taper away from the pavers for 6-8 inches.
- The slope of the material should be at a 30° to 45° degree angle.
- Before the Edge Loc starts to harden, use a mechanical compactor to compact the base material and bedding sand below the pavers. This should be 1-2 inches deep.
- Finish by applying Paver Locking Sand and NorthRock Weed Blocker over the pavers.

SPECIFICATIONS

- 25 lb. (11.3 kg) Pail
- Color: Gray